

# INDEX

Description	Note No.	Page No.	Description	Note No.	Page No.
<b>A</b>					
AIR CONDITIONER		16-A-1	AUTRONIC EYE (Cont'd.)		
Coil, Actuating Clutch, Removal and Installation. . . . .	13	16-A-9	Hold Sensitivity Adjustment. . . . .	2	16-C-1
Coil, Cooling, Replace . . . . .	21	16-A-14	Hold Sensitivity Test . . . . .	1	16-C-1
Compressor Installation . . . . .	16	16-A-12	Service Information . . . . .		16-C-1
Compressor Removal. . . . .	11	16-A-8	<b>B</b>		
Condenser, Replace. . . . .	25	16-A-15	BODY		3-1
Dehydrator Receiver Assembly, Replace. . . . .	23	16-A-15	Circuit Diagram. . . . .		3-10
Evacuating the System . . . . .	7	16-A-6	Frame, Door Window, Removal and Installation. . . . .	5	3-3
Filter, Removal and Installation .	22	16-A-14	General Description. . . . .		3-1
Freon 12, Precautions in Handling	1	16-A-1	Handle, Door Outside, Removal and Installation (60S and 6219). . .	2	3-1
Gage Set, Installation . . . . .	5	16-A-5	Hinge, Door Rear, Adjustments, (60S). . . . .	6	3-4
General Description. . . . .		16-A-1	Hinge, Rear Door Assembly Removal and Installation (60S). . .	7	3-4
Lines, Precautions in Handling . .	2	16-A-3	Lacquer, Metallic, Repair and Maintenance . . . . .	13	3-9
Maintenance and Inspection. . . .	3	16-A-3	Lock Assembly, Front Door, Removal and Installation. . . . .	3	3-2
Motor, Blower, Replace . . . . .	20	16-A-14	Moldings, Eldorado Exterior, Remove and Install. . . . .	10	3-5
Oil, Checking and Adding . . . . .	9	16-A-8	Molding, Rear Door Window Rear Reveal, Remove and Install . . . .	9	3-5
Pulley, Clutch Compressor, Assembly and Installation . . . .	14	16-A-10	Molding, Rear Quarter Window Reveal, Removal and Installation (6219 and 60S). . . . .	8	3-5
Pulley, Compressor Clutch, Removal and Disassembly. . . .	12	16-A-9	Service Information. . . . .		3-1
Purging Air or Excess Refrig- erant from the System. . . . .	10	16-A-8	Specifications . . . . .		3-10
Purging the System . . . . .	6	16-A-5	Top Boot Replacement. . . . .	11	3-6
Reeds, Compressor Discharge Valve Checking Operation . . . .	17	16-A-13	Weatherstrip, Front Door Hinge Pillar Auxiliary, Removal and Installation . . . . .	4	3-4
Refrigerant, Adding. . . . .	8	16-A-7	Windshield Assembly, Removal and Installation . . . . .	12	3-7
Seal and Seat, Compressor Shaft, Removal and Installation. . . .	15	16-A-11	Windshield Wiper Arm and Cam, Removal and Installation. . . . .	1	3-1
Service Diagnosis . . . . .		16-A-16,17	<b>BRAKES</b>		
Service Information. . . . .		16-A-1	Brake Assembly, Power, Disassemble . . . . .	2	9-3
Service Precautions. . . . .	4	16-A-4	Brake Assembly, Power, Removal .	1	9-1
Sight Glass, Replace . . . . .	24	16-A-15	Brake, Power, Assemble . . . . .	4	9-4
Special Tools . . . . .		16-A-18	Cylinder Assembly, Hydraulic, Disassemble . . . . .	2a	9-3
Thermostat, Replace . . . . .	26	16-A-16	Cylinder, Hydraulic, Assemble. . .	4c	9-4
Valve, Expansion, Adjustment . .	18	16-A-13	Cylinder, Power, Installation . . . .	5	9-5
Valve, Expansion, Replace . . . .	19	16-A-14	General Description. . . . .		9-1
<b>AUTOMATIC HEATING SYSTEM.</b>			Parts, Cleaning and Inspection of. .	3	9-4
General Description. . . . .		16-B-1	Piston, Vacuum, Assemble . . . . .	4a	9-4
Heater Unit, Removal and Installation. . . . .	4	16-B-2	Piston, Vacuum, Disassemble. . . .	2c	9-3
Levers, Control, Operation of "Heat" and "Defr" . . . . .	2	16-B-1	Service Information. . . . .		9-1
Lever, "Defr" Control Adjustment	3	16-B-2	Specifications. . . . .		9-6
Service Information. . . . .		16-B-1	Torque Tightness . . . . .		9-5
Water Flow . . . . .	1	16-B-1	Valve, Check, Assemble . . . . .	4d	9-5
Valve, Thermostatic Control, Removal and Installation. . . . .	5	16-B-2			
<b>AUTRONIC EYE</b>					
Dim Sensitivity Adjustment. . . .	4	16-C-2			
Dim Sensitivity Test . . . . .	3	16-C-2			
General Description. . . . .		16-C-1			

# INDEX

Description	Note No.	Page No.	Description	Note No.	Page No.
<b>BRAKES (Cont'd.)</b>			<b>E</b>		
Valve, Check, Disassemble. . . . .	2d	9-4	ENGINE COOLING		13-1
Valve, Vacuum Control, Assemble. . .	4b	9-4	General Description . . . . .		13-1
Valve, Vacuum Control Assembly, Disassemble. . . . .	2b	9-3	Pump, Water, Removal and Installation . . . . .	2	
<b>C</b>			Radiator Assembly, Removal and Installation . . . . .	1	13-1
<b>CHASSIS ELECTRICAL</b>			Service Information. . . . .		13-1
		15-1	Specifications . . . . .		13-2
Bulb Data Chart . . . . .		15-5	Torque Tightness . . . . .		13-2
Bulb Replacement . . . . .	2	15-1	<b>ENGINE ELECTRICAL</b>		
Circuit Diagram . . . . .		15-2	Distributor . . . . .		11-1
Cluster, Instrument Panel, Assembly and Installation . . . . .	7	15-4	Advance Curves. . . . .		11-1
Cluster, Instrument Panel, Disassembly and Assembly . . . . .	6	15-3	General Description . . . . .		11-1
Cluster, Instrument Panel, Removal . .	5	15-3	Service Information. . . . .		11-1
Fuse Locations . . . . .		15-5	Specifications . . . . .		11-1,2
General Description . . . . .		15-1	Torque Tightness . . . . .		11-2
Headlamp Unit, Replacement . . . . .	1	15-1	<b>ENGINE MECHANICAL</b>		
Service Information. . . . .		15-1	General Description . . . . .		10-1
Speedometer Pinion Application Chart . . . . .		15-5	Service Information. . . . .		10-1
Switch, Directional Signal Assembly and Installation . . . . .	4	15-1	Specifications . . . . .		10-1,2,3
Switch Directional Signal, Removal and Disassembly. . . . .	3	15-1	Torque Tightness . . . . .		10-4
<b>CHASSIS SHEET METAL</b>			<b>F</b>		
		4-1	FRAME		5-1
Bumper Assembly, Front, Removal . . .	1	4-1	Body Bolt Locations . . . . .		5-1
Bumper, Front, Disassembly and Assembly . . . . .	4	4-2	Checking Dimensions . . . . .		5-2
Bumper Sections, Front, Removal and Installation . . . . .	5	4-2	General Description . . . . .		5-1
Fender, Left Front, Install. . . . .	8	4-3	<b>FUEL AND EXHAUST</b>		
Fender, Left Front, Remove . . . . .	7	4-3	Accelerator Pump Adjustment . . . . .	1	12-1
Fender, Right Front, Remove and Install . . . . .	9	4-4	General Description . . . . .		12-1
General Description . . . . .		4-1	Idle Speed Adjustment . . . . .	2	12-1
Grille, Radiator, Disassembly and Assembly . . . . .	3	4-1	Service Information. . . . .		12-1
Grille, Radiator, Removal . . . . .	2	4-1	Special Tools . . . . .		12-
Service Information. . . . .		4-1	Specifications . . . . .		12-
Support Assembly, Radiator . . . . .	6	4-2	Torque Tightness . . . . .		12-
<b>CHASSIS SUSPENSION</b>			<b>G</b>		
		6-1	GENERAL INFORMATION		1-1
General Description . . . . .		6-1	Arrangement of Supplement . . . . .		1-1
Rear Spring Data Chart . . . . .		6-4	Autronic-Eye Serial Number Plate Location . . . . .		1-3
Service Information. . . . .		6-1	Body Name Plate Location . . . . .		1-2
Spring Heights . . . . .		6-4	Engine Serial Number Location . . . .		1-2
Tires, Removal and Installation . . . .	2	6-2	Engine Unit Number Chart . . . . .		1-2
Tires, Tubeless, Checking and Repairing Leaks. . . . .	1	6-1	Engine Unit Number Location . . . . .		1-2
Torque Tightness . . . . .		6-4	Hydra-Matic Transmission Serial Number Location . . . . .		1-2
			Radio Serial Number Plate Location . .		1-3
			Rear Axle Gear Ratio Chart . . . . .		1-3

# INDEX

Description	Note No.	Page No.	Description	Note No.	Page No.
<b>H</b>					
<b>HYDRA-MATIC TRANSMISSION</b>			<b>LUBRICATION (Cont'd.)</b>		
Band Adjustment . . . . .	3	14-5	Hydro-Lectric System . . . . .	4c	2-4
Disassembly and Assembly . . . . .	1c	14-4	Inspections, 2000 and 4000 Mile . . . . .	2	2-4
General Information . . . . .		14-1	Inspections, 2000 and 4000 Mile, Related Items . . . . .	3	2-4
Identification . . . . .		14-1	Lube Chart . . . . .		2-2,3
Leaks, Correction at Fluid Coupling .	1a	14-4	Lubrication Agreement . . . . .		2-1
Lever, Lower Shift, Removal and Installation . . . . .	7b	14-7	Operations, Miscellaneous . . . . .	1	2-1
Linkage, Throttle Control Adjustment	2	14-4	Points Requiring None . . . . .	13	2-9
Minor Changes . . . . .	1	14-4	Rear Axle . . . . .	7	2-6
Oil Cooler Assembly, Removal and Installation . . . . .	5	14-6	Schedule . . . . .	1	2-1
Pump Pressure, Check . . . . .	4	14-6	Series 75 . . . . .	12	2-9
Removal and Installation . . . . .	1b	14-4	Service Information . . . . .		2-1
Service Information . . . . .		14-4	Steering Gear . . . . .	6	2-6
Special Tools . . . . .		14-9	<b>R</b>		
Specifications . . . . .		14-8	<b>REAR AXLE</b>		
Torque Tightness . . . . .		14-8	General Description . . . . .		8-1
Towing Instructions . . . . .	6	14-7	<b>S</b>		
Tube, Shifter, Removal and Installation . . . . .	7	14-7	<b>STEERING</b>		
<b>L</b>			Bearing, Upper Steering Shaft Lower, Removal and Installation . . . . .	8	7-4
<b>LUBRICATION</b>			Bearing, Upper Steering Shaft Removal and Installation . . . . .	10	7-5
Air Conditioner . . . . .	11	2-9	Gear Adjustments . . . . .	1	7-2
Body . . . . .	4	2-4	Gear, Disassembly and Assembly . . . . .	5	7-2
Body Hardware . . . . .	4a	2-4	Gear Installation . . . . .	4	7-2
Body Weatherstrips . . . . .	4b	2-4	General Description . . . . .		7-1
Brakes . . . . .	8	2-6	Guide, Power Rack, Adjustment . . . . .	1c	7-2
Chassis Suspension . . . . .	5	2-4	Hydraulic System, Bleeding . . . . .	2	7-2
Commercial Chassis . . . . .	12	2-9	Linkage, Steering, Removal and Installation . . . . .	3	7-2
Engine . . . . .	9	2-6	Pitman Shaft End Play Adjustment . . . . .	1b	7-2
Engine Accessories . . . . .	9D	2-7	Preload Check, Off-Center . . . . .	10a	7-2
Engine, Adding Oil . . . . .	9b	2-7	Service Information . . . . .		7-2
Engine, Changing Oil . . . . .	9C	2-7	Shaft, Upper Steering, Installation . . . . .	9	7-4
Engine Oil Recommendations . . . . .	9A	2-6	Shaft, Upper Steering, Removal . . . . .	7	7-4
Fluid, Hydra-Matic, Checking Level .	10a	2-8	Special Tools . . . . .		7-7
Fluid, Hydra-Matic, Replace . . . . .	10b	2-9	Specifications . . . . .		7-6
General Description . . . . .		2-1	Torque Tightness . . . . .		7-6
Hydra-Matic Transmission . . . . .	10	2-8			